

TERROR STAMP MANUAL

**SAFETY**

<h1>Important Safety Information</h1>

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarised or grounding-type plug. A polarised plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of un-insulated 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle and "WARNING" are intended to alert the user to the presence of important operating instructions. Failure to heed the instructions will result in severe injury or death.

 NEVER PLACE OBJECTS CONTAINING LIQUIDS ON OR NEAR THE PRODUCT. IF LIQUID FALLS INTO THE PRODUCT, DISCONNECT THE DEVICE FROM THE MAINS OUTLET AND REFER THE PRODUCT TO AN AUTHORISED TECHNICIAN.

NO USER SERVICEABLE PARTS INSIDE. DO NOT ATTEMPT TO GAIN ACCESS TO THE INTERIOR OF THE PRODUCT.

This product complies with the WEEE Directive (2002/96/EC) marking requirement. This affixed product label indicates that you must not discard this electrical/electronic product in domestic household waste. Please contact your local authority for details of your nearest approved recycling facility.

POWERING YOUR TERROR STAMP

15V DC / 2A Switching Power Adapter

Only use the included power adapter with the Terror Stamp

Before use, ensure the supplied IEC cord plug is the correct plug fitting for your region. If unsure, contact your Dealer.

Ensure the IEC cord fits tightly in the adapter before connecting the IEC cord to your AC mains supply.

If the adapter or IEC cord becomes damaged, disconnect the power adapter from the mains/wall outlet and contact your Orange Dealer.





Volume 1

Adjusts the overall output volume. Experiment with the **Gain** control to achieve the desired balance.

Set to the minimum position before switching the unit ON. The LED will illuminate when the channel is engaged.
 When using the **Phones** output, keep the **Volume** control low to avoid overloading headphones or the input of your mixer/recording console.



Volume 2

Adjusts the overall output volume. Experiment with the **Gain** control to achieve the desired balance.

Set to the minimum position before switching the unit ON. The LED will illuminate when the channel is engaged.
 When using the **Phones** output, keep the **Volume** control low to avoid overloading headphones or the input of your mixer/recording console.



Shape

Adjusts the tonal response.

Turning clockwise reduces mids and produces brighter tones. Turning fully clockwise 'scoops' the mids entirely.
 Turning anticlockwise increases the mids and smooths the treble.



Gain

Adjusts the gain level. A variety of tones can be achieved, from clean (low setting) to heavy distortion (higher settings) and everywhere in between.

*Note: With the **Gain** set to minimum, no sound will be heard.*



Volume Toggle Switch

The Terror StAmp has two master volume channels. Engage this switch to toggle between the volume setting on each channel.

REAR PANEL



1. INPUT	CONNECT YOUR INSTRUMENT USING A QUALITY SHIELDED INSTRUMENT CABLE ONLY.
2. FX LOOP SEND / LINE OUT	CONNECT THE EFFECTS SEND TO THE INPUT OF THE EFFECTS PEDAL OR CONNECT THE UNIT DIRECTLY TO A MIXING DESK OR OTHER SIMILAR DEVICE.
3. FX LOOP RETURN	CONNECT THE OUTPUT OF YOUR EFFECTS CHAIN TO THE RETURN JACK. NOTE. OVERDRIVE, BOOST AND FILTER EFFECTS (WAH ETC) ARE USUALLY BEST PLACED BETWEEN THE GUITAR AND THE AMP INPUT, RATHER THAN IN THE FX LOOP.
4. CABSIM OUTPUT	THE CABSIM HEADPHONE OUT FAITHFULLY EMULATES THE SOUND OF A MIC'D 4x12 CABINET. USE HEADPHONES FOR SILENT PRACTICE OR CONNECT TO A MIXER/RECORDING CONSOLE.
5. SPEAKER OUTPUT	ENSURE YOU ONLY CONNECT CABS WITH THE CORRECT IMPEDANCE. 1 X 16 OHM 2 X 16 OHM 1 X 8 OHM
DC INPUT 15V DC / 2A	CONNECT THE INCLUDED SWITCHING POWER ADAPTOR TO THIS SOCKET. ONLY USE THE POWER ADAPTOR SUPPLIED WITH THE PRODUCT. IF THE ADAPTOR OR IEC CORD BECOMES DAMAGED, DISCONTINUE USE IMMEDIATELY AND CONTACT YOUR ORANGE DEALER.