

Owner's Manual

Guitar Amplifier

Nextone Stage
Nextone Artist
Nextone Special



Nextone Stage
NEX-STAGE
40 W output, 30 cm (12 inch) speaker



Nextone Artist
NEX-ARTIST
80 W output, 30 cm (12 inch) speaker



Nextone Special
NEX-SPL
80 W output, 30 cm (12 inch) speaker

English

日本語

Deutsch

Français

Italiano

Español

Português

Nederlands

USING THE UNIT SAFELY

Before using this unit, carefully read "IMPORTANT SAFETY INSTRUCTIONS" (inside front cover), "USING THE UNIT SAFELY" (p. 2), and "IMPORTANT NOTES" (p. 3). After reading, keep the document(s) where it will be available for immediate reference.

© 2018 Roland Corporation

INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

About ⚠ WARNING and ⚠ CAUTION Notices

⚠ WARNING	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
⚠ CAUTION	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

About the Symbols

	The ⚠ symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
	The symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.
	The symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.

ALWAYS OBSERVE THE FOLLOWING

WARNING

Make sure that the power cord is grounded

Connect mains plug of this model to a mains socket outlet with a protective earthing connection.




To completely turn off power to the unit, pull out the plug from the outlet

Even with the power switch turned off, this unit is not completely separated from its main source of power. When the power needs to be completely turned off, turn off the power switch on the unit, then pull out the plug from the outlet. For this reason, the outlet into which you choose to connect the power cord's plug should be one that is within easy reach and readily accessible.



Secure a sufficient amount of space at the setup location

Since this unit normally emits a slight amount of heat, make sure to secure sufficient space around it, as shown below.

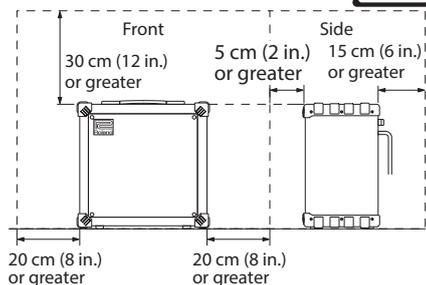

Do not disassemble or modify by yourself

Do not carry out anything unless you are instructed to do so in the owner's manual. Otherwise, you risk causing malfunction.



Do not repair or replace parts by yourself

Refer all servicing to your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information."



WARNING

Do not use or store in the following types of locations

- Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are
- Damp (e.g., baths, washrooms, on wet floors); or are
- Exposed to steam or smoke; or are
- Subject to salt exposure; or are
- Exposed to rain; or are
- Dusty or sandy; or are
- Subject to high levels of vibration and shakiness; or are
- Placed in a poorly ventilated location.



Do not place in an unstable location

Otherwise, you risk injury as the result of the unit toppling over or dropping down.



Connect the power cord to an outlet of the correct voltage

The unit should be connected to a power supply only of the type described as marked on the rear side of unit.



Use only the supplied power cord

Use only the attached power cord. Also, the supplied power cord must not be used with any other device.



Do not bend the power cord or place heavy objects on it

Otherwise, fire or electric shock may result.



Avoid extended use at high volume

Use of the unit at high volume for extended periods of time may cause hearing loss. If you ever experience any hearing loss or ringing in the ears, you should immediately stop using the unit and consult a specialized physician.



WARNING

Do not allow foreign objects or liquids to enter unit; never place containers with liquid on unit

Do not place containers containing liquid (e.g., flower vases) on this product. Never allow foreign objects (e.g., flammable objects, coins, wires) or liquids (e.g., water or juice) to enter this product. Doing so may cause short circuits, faulty operation, or other malfunctions.



Turn off the unit if an abnormality or malfunction occurs

Immediately turn the unit off, remove the power cord from the outlet, and request servicing by your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" when:



- The power cord has been damaged; or
- If smoke or unusual odor occurs; or
- Objects have fallen into, or liquid has been spilled onto the unit; or
- The unit has been exposed to rain (or otherwise has become wet); or
- The unit does not appear to operate normally or exhibits a marked change in performance.

Be cautious to protect children from injury

Always make sure that an adult is on hand to provide supervision and guidance when using the unit in places where children are present, or when a child will be using the unit.



Do not drop or subject to strong impact

Otherwise, you risk causing damage or malfunction.



Do not share an outlet with an unreasonable number of other devices

Otherwise, you risk overheating or fire.



Do not use overseas

Before using the unit in overseas, consult with your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information."



Don't block ventilation openings

Don't allow the unit's ventilation openings to be blocked by a newspaper, tablecloth, curtains, or similar objects.



Don't place burning objects on the unit

Don't place any burning object (such as a candle) on the unit.



Be aware of weather conditions

Use the apparatus in moderate climates.



CAUTION

When disconnecting the power cord, grasp it by the plug

To prevent conductor damage, always grasp the power cord by its plug when disconnecting it.



Periodically clean the power plug

An accumulation of dust or foreign objects between the power plug and the power outlet can lead to fire or electric shock.



At regular intervals, be sure to pull out the power plug, and using a dry cloth, wipe away any dust or foreign objects that may have accumulated.

Disconnect the power plug whenever the unit will not be used for an extended period of time

Fire may result in the unlikely event that a breakdown occurs.



CAUTION

Route all power cords and cables in such a way as to prevent them from getting entangled

Injury could result if someone were to trip on a cable and cause the unit to fall or topple.



Avoid climbing on top of the unit, or placing heavy objects on it

Otherwise, you risk injury as the result of the unit toppling over or dropping down.



Never connect/disconnect a power plug if your hands are wet

Otherwise, you could receive an electric shock.



CAUTION

Disconnect all cords/cables before moving the unit

Before moving the unit, disconnect the power plug from the outlet, and pull out all cords from external devices.



Before cleaning the unit, disconnect the power plug from the outlet

If the power plug is not removed from the outlet, you risk receiving an electric shock.



Whenever there is a threat of lightning, disconnect the power plug from the outlet

If the power plug is not removed from the outlet, you risk causing malfunction or receiving an electric shock.



English

日本語

Deutsch

Français

Italiano

Español

Português

Nederlands

IMPORTANT NOTES

Power Supply

- Do not connect this unit to same electrical outlet that is being used by an electrical appliance that is controlled by an inverter or a motor (such as a refrigerator, washing machine, microwave oven, or air conditioner). Depending on the way in which the electrical appliance is used, power supply noise may cause this unit to malfunction or may produce audible noise. If it is not practical to use a separate electrical outlet, connect a power supply noise filter between this unit and the electrical outlet.

Placement

- Using the unit near power amplifiers (or other equipment containing large power transformers) may induce hum. To alleviate the problem, change the orientation of this unit; or move it farther away from the source of interference.
- This unit may interfere with radio and television reception. Do not use this unit in the vicinity of such receivers.
- Noise may be produced if wireless communications devices, such as cell phones, are operated in the vicinity of this unit. Such noise could occur when receiving or initiating a call, or while conversing. Should you experience such problems, you should relocate such wireless devices so they are at a greater distance from this unit, or switch them off.
- When moved from one location to another where the temperature and/or humidity is very different, water droplets (condensation) may form inside the unit. Damage or malfunction may result if you attempt to use the unit in this condition. Therefore, before using the unit, you must allow it to stand for several hours, until the condensation has completely evaporated.
- Depending on the material and temperature of the surface on which you place the unit, its rubber feet may discolor or mar the surface.
- Do not place containers or anything else containing liquid on top of this unit. Also, whenever any liquid has been spilled on the surface of this unit, be sure to promptly wipe it away using a soft, dry cloth.

Maintenance

- Never use benzine, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.

Repairs and Data

- Before sending the unit away for repairs, be sure to make a backup of the data stored within it; or you may prefer to write down the needed information. Although we will do our utmost to preserve the data stored in your unit when we carry out repairs, in some cases, such as when the memory section is physically damaged, restoration of the stored content may be impossible. Roland assumes no liability concerning the restoration of any stored content that has been lost.

Additional Precautions

- Any data stored within the unit can be lost as the result of equipment failure, incorrect operation, etc. To protect yourself against the irretrievable loss of data, try to make a habit of creating regular backups of the data you've stored in the unit.
- Roland assumes no liability concerning the restoration of any stored content that has been lost.
- Use a reasonable amount of care when using the unit's buttons, sliders, or other controls; and when using its jacks and connectors. Rough handling can lead to malfunctions.
- When disconnecting all cables, grasp the connector itself—never pull on the cable. This way you will avoid causing shorts, or damage to the cable's internal elements.
- A small amount of heat will radiate from the unit during normal operation.
- To avoid disturbing others nearby, try to keep the unit's volume at reasonable levels.
- When disposing of the packing carton or cushioning material in which this unit was packed, you must observe the waste disposal regulations that apply to your locality.

- Use only the specified expression pedal. By connecting any other expression pedals, you risk causing malfunction and/or damage to the unit.

- Do not use connection cables that contain a built-in resistor.

Intellectual Property Right

- Roland and BOSS are either registered trademarks or trademarks of Roland Corporation in the United States and/or other countries.
- ASIO is a trademark and software of Steinberg Media Technologies GmbH.
- This product contains eParts integrated software platform of eSOL Co., Ltd. eParts is a trademark of eSOL Co., Ltd. in Japan.
- Company names and product names appearing in this document are registered trademarks or trademarks of their respective owners.

Panel Descriptions (Nextone Stage / Artist)

Top panel



Rear panel/Bottom panel



Top Panel

1 [CH SELECT] button

Switches between the CLEAN channel and the LEAD channel. The indicator of the selected channel is lit.

* Hold down this button for one second or longer to select CUSTOM mode. In CUSTOM mode, sound settings can be made only using the dedicated software.

<http://www.boss.info/>

2 INPUT jack

Connect your electric guitar here.

3 [BOOST] button

Boosts the gain. On the CLEAN channel, this produces a pleasant crunch sound. On the LEAD channel, this produces hard distortion.

4 [TONE] button

On the CLEAN channel, this makes the mid- and high-frequency ranges sparkle, producing a crisp sound. On the LEAD channel, this produces a fat tone.

5 CLEAN channel

Lets you create a broad range of sounds from undistorted clean sound to light overdrive.

[VOLUME] knob

Adjusts the volume of the clean channel.

6 LEAD channel

[GAIN] knob

Adjusts the gain (amount of distortion) of the LEAD channel. Use this knob to change from crunch sound to hard distortion. Turning the [BOOST] button on raises the gain of the LEAD channel.

[VOLUME] knob

Adjusts the volume of the LEAD channel.

7 EQUALIZER

[BASS] knob

Adjusts the sound level of the low-frequency range.

[MIDDLE] knob

Adjusts the sound level of middle-frequency range.

[TREBLE] knob

Adjusts the sound level of the high-frequency range.

8 EFFECT

[DELAY] button

Turns the DELAY on/off.

[DELAY] knob

Adjusts the depth of delay effect.

[TAP] button

Sets the delay time. When you press this button two or more times, the delay time is set to the interval between presses.

[REVERB] knob

Adjusts the reverb depth.

9 [PRESENCE] knob

Adds lustrous outline to the mid- and high-frequency range. This is effective when you want to improve the definition of the sound.

10 [MASTER] knob

Adjusts the overall volume.

11 [POWER AMP SELECT] switch

Selects the type of power amp. Using proprietary Tube Logic technology (p. 11), this applies adjustments to each power tube of the power amp circuit, so that not only the power tubes but also the cabinet speaker is driven optimally.

Type	Explanation
6V6	An American-type sound that easily distorts with a sense of drive even at low volumes, and has a distinctively crisp sound.
6L6	An American-type sound suitable for clean tones with a sense of solidity, and distinctive for its rich mid-frequency range. Also used in high-gain stack amps.
EL84	Distinctive for overdrive sound with rich overtones. A British-type sound that produces a sense of drive at low output.
EL34	Characterized by warm and fat sound with detailed distortion. Raising the gain produces a British-type sound that stands out well. Often used in stack amps.

12 [POWER CONTROL] switch

Lets you switch the output level of the power amp according to your location or needs. By selecting "STANDBY" you can mute the sound while leaving the unit powered-on. This lets you mute the amp without changing the volume or other settings when you leave the stage, such as between sets of your live performance.

13 [POWER] switch

Turns the power of the Nextone on/off.

Rear Panel/Bottom Panel

14 AC IN jack

Connect the included power cord (p. 11).

* Use only the power cord that was included with the unit.


15 PHONES/REC OUT jack

Connect headphones here. You can obtain powerful guitar sounds just as if you were playing through the speaker. To adjust the volume, use the [VOLUME] knob along with the [MASTER] knob.

* If a plug is inserted in this jack, no sound will be output from the Nextone's own speaker. This is convenient if you don't want loud sound to be produced from the speaker, such as when you're practicing at night.

16 LINE OUT jack

Connect this to your PA system or recorder. You can obtain powerful guitar amp sound just as if you were playing through the speaker.

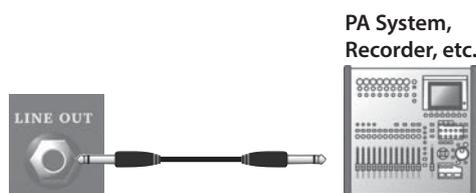

You can use this in conjunction with an external PA system, or to record your performance via direct line while monitoring the sound from the Nextone's speaker.

Adjust the output level using the [VOLUME] knob. Since the [MASTER] knob does not affect the output, you can turn down the [MASTER] knob so that sound is output to a connected device without any sound being produced from the amp itself.

17 EFX LOOP SEND/RETURN jacks

Connect an external effect device (mono).

Connect the SEND jack to the input of your external effect device, and connect the output of your external effect device to the RETURN jack.

18 USB port

You can use a commercially available USB 2.0 cable to record the sound of the Nextone into your computer. You can also use dedicated software to edit the amp's internal settings.



You must install the USB driver when connecting the unit to your computer.

Download the USB driver from the BOSS website. For details, refer to Readme.htm which is included in the download.

<http://www.boss.info/support/>

19 FOOT CONTROL

CH SELECT/BOOST jack

If you connect a footswitch (sold separately: FS-6, FS-7, or FS-5L), you can use your foot to turn the BOOST on/off and switch between CLEAN channel and LEAD channel.

DELAY/GA-FC jack

If you connect a footswitch (sold separately: FS-6, FS-7, or FS-5L), you can use your foot to turn the DELAY on/off. If you connect the separately sold GA-FC to switch channels and turn effects on/off.

20 SPEAKER OUT jack

Connect a speaker box. Only use speaker cable to connect the speaker. Do not use any shielded cable designed for use with guitars.

- When the unit is shipped from the factory, the internal speaker is connected to the 8Ω jack. If a plug is connected to the 8Ω jack, sound is not output from the 16Ω (A/B) jacks. If you want to use an external speaker, disconnect the internal speaker's plug from the 8Ω jack.
- If you use the 8Ω jack, you must use a speaker box whose input impedance is 8Ω or higher.
- If you use the 16Ω (A/B) jacks, you must use speaker boxes whose input impedance is 16Ω or higher.

To prevent malfunction and equipment failure, always turn down the volume, and turn off all the units before making any connections.

English

日本語

Deutsch

Français

Italiano

Español

Português


Nederlands

Connecting a Footswitch (Sold Separately)

Connecting the BOSS FS-6, FS-7, or FS-5L

CH SELECT/BOOST jack

* Pin assignment of FOOT CONTROL jack

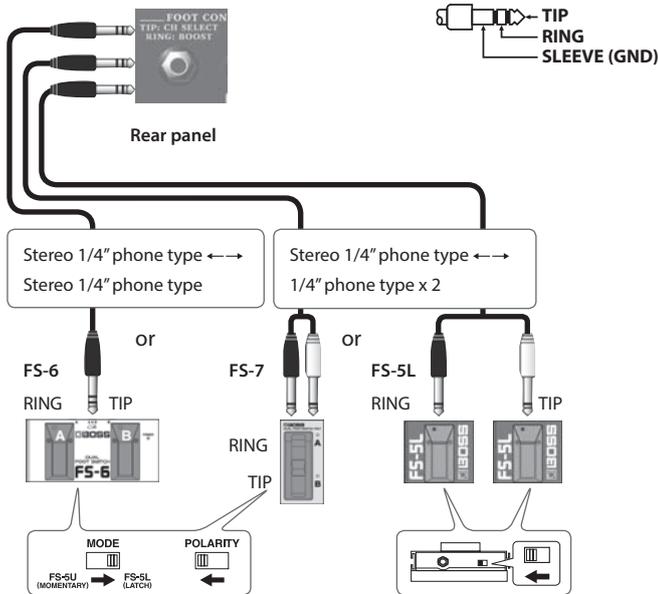


Switch	Explanation
TIP	Switches between CLEAN channel and LEAD channel.
RING	Turns the BOOST on/off.

* The Nextone is compatible with latch-type footswitches (FS-6, FS-7, FS-5L). If you're using an FS-6 or FS-7, set the mode of A and B to FS-5L (LATCH). Momentary-type footswitches (e.g., FS-5U) cannot be used.

DELAY jack


Turns the DELAY on/off.

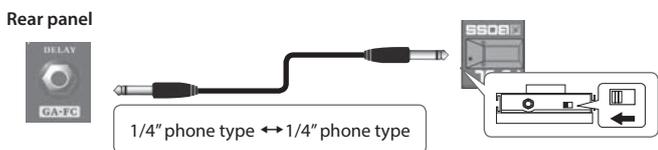

Connecting the GA-FC


Connect a stereo cable to the GA-FC jack.

- * Always use a stereo cable.
- * Use cables that do not contain resistors.

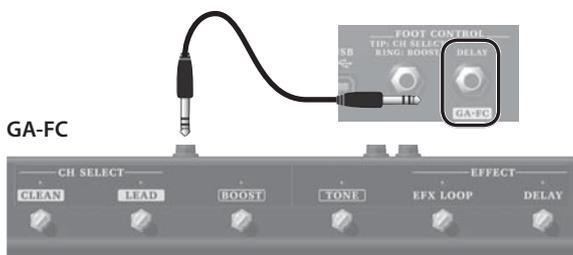


Using the GA-FC

You can switch between CLEAN and LEAD. You can also switch the BOOSTER, TONE, EFFECT LOOP (EFX LOOP), and DELAY on/off.

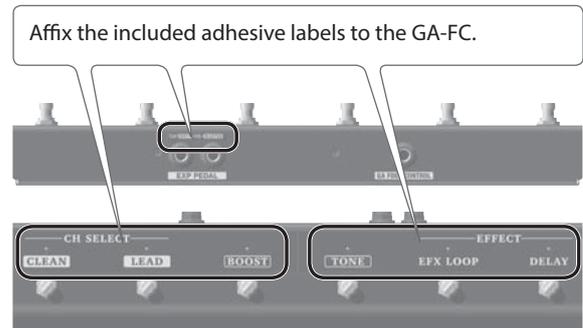

Using the expression pedals

If you connect an expression pedal (sold separately: Roland EV-5, BOSS FV-500L, BOSS FV-500H), you can use the pedal to vary the volume.

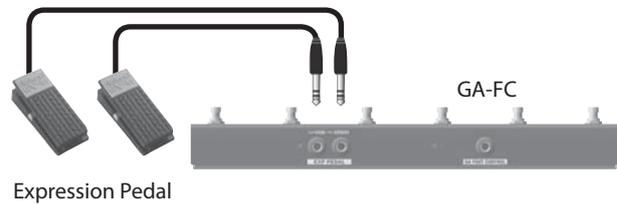

Jack	Explanation
TAP/INPUT	Adjusts the guitar's signal level that is input to the preamp.
VOLUME	Adjusts the master volume.

Setting MINIMUM VOLUME of an expression pedal


With the [MINIMUM VOLUME] knob of an expression pedal, you can set the value for when the pedal is lifted up all the way (lowest value).



* Use only the specified expression pedal. By connecting any other expression pedals, you risk causing malfunction and/or damage to the unit.


MEMO

If a footswitch (sold separately: FS-5U) is connected to the rear panel TAP/INPUT jack, you can use it to set the delay time just as you operate the [TAP] button (p. 4).

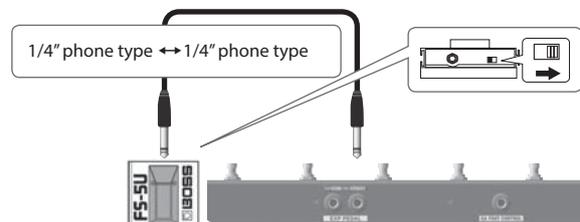


Panel Descriptions (Nextone Special)

Front panel

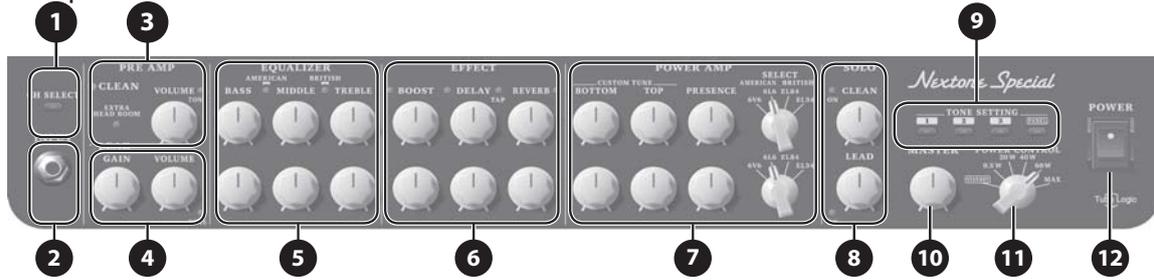

Rear panel

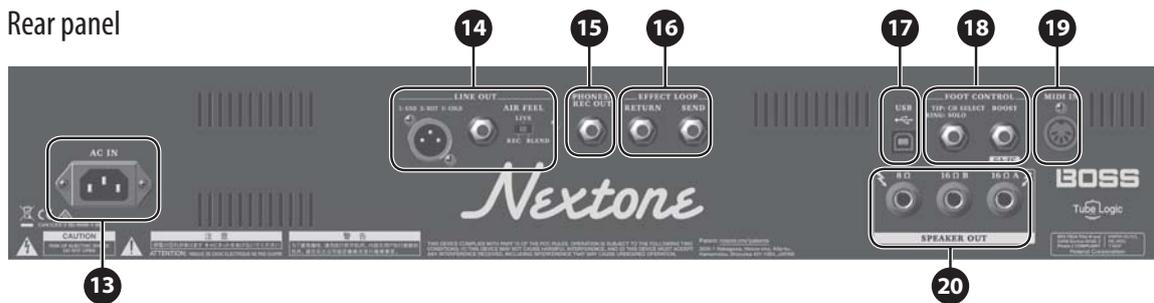

Top Panel

1 [CH SELECT] button

Switches between the CLEAN channel and the LEAD channel. The indicator of the selected channel is lit. Settings of the PRE AMP, EQUALIZER, EFFECT, and POWER AMP knobs and buttons can be made individually for each channel.



2 INPUT jack

Connect your electric guitar here.

3 PRE AMP (CLEAN channel)

Lets you create a broad range of sounds from undistorted clean sound to light overdrive.

[EXTRA HEAD ROOM] button

Turning this on lets you obtain an even more dynamic response.

[VOLUME] knob

Adjusts the volume of the clean channel.

[TONE] button

Makes the mid- and high-frequency ranges sparkle, producing a crisp sound.

4 PRE AMP (LEAD channel)

[GAIN] knob

Adjusts the gain (amount of distortion) of the LEAD channel. Use this knob to change from crunch sound to hard distortion. Turning the [BOOST] button on raises the gain of the LEAD channel.

[VOLUME] knob

Adjusts the volume of the LEAD channel.

[TONE] button

Produces a fat tone.

5 EQUALIZER

[AMERICAN] / [BRITISH] button

Switches the equalizer type between American and British types.

[BASS] knob

Adjusts the sound level of the low-frequency range.

[MIDDLE] knob

Adjusts the sound level of middle-frequency range.

[TREBLE] knob

Adjusts the sound level of the high-frequency range.

6 EFFECT

[BOOST] button

Turns the BOOST on/off.

[BOOST] knob

Adjusts the gain (amount of distortion). On the CLEAN channel, this produces a pleasant crunch sound. On the LEAD channel, this produces hard distortion.

[DELAY] button

Turns the DELAY on/off.

[DELAY] knob

Adjusts the depth of delay effect.

[TAP] button

Sets the delay time. When you press this button two or more times, the delay time is set to the interval between presses.

[REVERB] button

Turns the REVERB on/off.

[REVERB] knob

Adjusts the reverb depth.

7 POWER AMP

[BOTTOM] knob

Adjusts the depth of the low-cut filter. If this is turned all the way to the left, the low-cut filter is not applied.

[TOP] knob

Adjusts the depth of the high-cut filter. If this is turned all the way to the left, the high-cut filter is not applied.

[PRESENCE] knob

Adds lustrous outline to the mid- and high-frequency range. This is effective when you want to improve the definition of the sound.

[POWER AMP SELECT] switch

Selects the type of power amp. Using proprietary Tube Logic technology (p. 11), this applies adjustments to each power tube of the power amp circuit, so that not only the power tubes but also the cabinet speaker is driven optimally.

Type	Explanation
6V6	An American-type sound that easily distorts with a sense of drive even at low volumes, and has a distinctively crisp sound.
6L6	An American-type sound suitable for clean tones with a sense of solidity, and distinctive for its rich mid-frequency range. Also used in high-gain stack amps.
EL84	Distinctive for overdrive sound with rich overtones. A British-type sound that produces a sense of drive at low output.
EL34	Characterized by warm and fat sound with detailed distortion. Raising the gain produces a British-type sound that stands out well. Often used in stack amps.

8 SOLO VOLUME

[ON] button

Turns the SOLO on/off.

[CLEAN] knob / [LEAD] knob

Adjusts the volume of the SOLO.

9 TONE SETTING

[1][2][3] button

Recalls the settings that are saved in each button.

Each button stores the settings of all panel knobs and buttons (except the [MASTER] knob). If you hold down a button for one second, the panel settings are stored in that button.

* To return to the factory settings, turn on the power while holding down the [PANEL] button.

[PANEL] button

Uses the current settings of the panel knobs.

10 [MASTER] knob

Adjusts the overall volume.

11 [POWER CONTROL] switch

Lets you switch the output level of the power amp according to your location or needs. By selecting "STANDBY" you can mute the sound while leaving the unit powered-on. This lets you mute the amp without changing the volume or other settings when you leave the stage, such as between sets of your live performance.

12 [POWER] switch

Turns the power of the Nextone on/off.

Rear Panel/Bottom Panel

13 AC IN jack

Connect the included power cord (p. 11).

* Use only the power cord that was included with the unit.

14 LINE OUT jack

Connect this to your PA system or recorder. You can obtain powerful guitar amp sound just as if you were playing through the speaker.




You can use this in conjunction with an external PA system, or to record your performance via direct line while monitoring the sound from the Nextone's speaker.

Adjust the output level using the [VOLUME] knob. Since the [MASTER] knob does not affect the output, you can turn down the [MASTER] knob so that sound is output to a connected device without any sound being produced from the amp itself.

BALANCED OUT jack

These are balanced output jacks for audio signals. Connect them to your mixer.

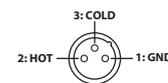

* Pin assignment of BALANCED OUT jack

[AIR FEEL] switch

Specifies the tonal character of the output jacks (LINE OUT, PHONES, USB).

Setting	Explanation
REC	Distant-mic sound suitable for recording.
LIVE	Close-mic sound suitable for live.
BLEND	A nice blend of distant-mic and close-mic sound, broadly usable for live or recording.

15 PHONES/REC OUT jack

Connect headphones here. You can obtain powerful guitar sounds just as if you were playing through the speaker. To adjust the volume, use the [VOLUME] knob along with the [MASTER] knob.

* If a plug is inserted in this jack, no sound will be output from the Nextone's own speaker. This is convenient if you don't want loud sound to be produced from the speaker, such as when you're practicing at night.

16 EFX LOOP SEND/RETURN jacks

Connect an external effect device (mono).
Connect the SEND jack to the input of your external effect device, and connect the output of your external effect device to the RETURN jack.

17 USB port

You can use a commercially available USB 2.0 cable to record the sound of the Nextone into your computer. You can also use dedicated software to edit the amp's internal settings.



You must install the USB driver when connecting the unit to your computer.

Download the USB driver from the BOSS website. For details, refer to Readme.htm which is included in the download.

<http://www.boss.info/support/>

18 FOOT CONTROL

CH SELECT/SOLO jack

If you connect a footswitch (sold separately: FS-6, FS-7, or FS-5L), you can use your foot to turn the SOLO mode on/off and switch between CLEAN channel and LEAD channel.

BOOST/GA-FC jack

If you connect a footswitch (sold separately: FS-6, FS-7, or FS-5L), you can use your foot to turn the BOOST on/off. If you connect the separately sold GA-FC to switch channels and turn effects on/off.

19 MIDI IN jack

You can control the Nextone Special from a multi-effect unit or a MIDI foot controller.

How the MIDI receive channel is specified

RX CH	Operation
1	Hold down the TONE SETTING [1] button while turning the power on.
2	Hold down the TONE SETTING [2] button while turning the power on.
3	Hold down the TONE SETTING [3] button while turning the power on.

* Receive channel is set to CH1 when shipped from the factory.

RECOGNIZED RECEIVE DATA

RX CH	1 - 3		
OMNI	OFF (fixed)		
PC	1 (00H)	PANEL	
	2 (01H)	CH 1	
	3 (02H)	CH 2	
	4 (03H)	CH 3	
CC	#16	CH SELECT	0 - 63 : CLEAN, 64 - 127 : LEAD
	#17	SOLO	0 - 63 : OFF, 64 - 127 : ON
	#18	BOOST	
	#19	DELAY	
	#20	REVERB	
	#21	EFFECT LOOP	0 - 127
	#80	GAFC EXP PEDAL 1	
#81	GAFC EXP PEDAL 2		

20 SPEAKER OUT jack

Connect a speaker box. Only use speaker cable to connect the speaker. Do not use any shielded cable designed for use with guitars.

- When the unit is shipped from the factory, the internal speaker is connected to the 8Ω jack. If a plug is connected to the 8Ω jack, sound is not output from the 16Ω (A/B) jacks. If you want to use an external speaker, disconnect the internal speaker's plug from the 8Ω jack.
- If you use the 8Ω jack, you must use a speaker box whose input impedance is 8Ω or higher.
- If you use the 16Ω (A/B) jacks, you must use speaker boxes whose input impedance is 16Ω or higher.


To prevent malfunction and equipment failure, always turn down the volume, and turn off all the units before making any connections.

Connecting a Footswitch (Sold Separately)

Connecting the BOSS FS-6, FS-7, or FS-5L

CH SELECT/BOOST jack

* Pin assignment of FOOT CONTROL jack

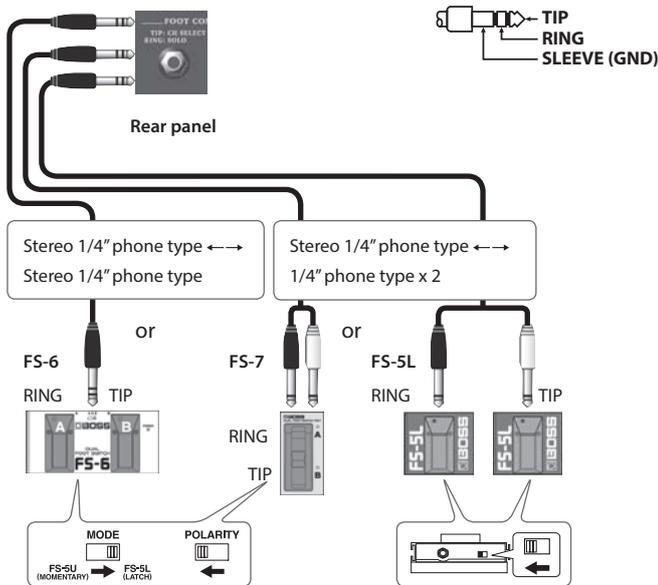


Switch	Explanation
TIP	Switches between CLEAN channel and LEAD channel.
RING	Turns the SOLO on/off.

* The Nextone is compatible with latch-type footswitches (FS-6, FS-7, FS-5L). If you're using an FS-6 or FS-7, set the mode of A and B to FS-5L (LATCH). Momentary-type footswitches (e.g., FS-5U) cannot be used.

BOOST jack


Turns the BOOST on/off.

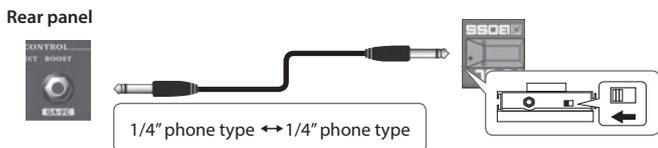

Connecting the GA-FC

Connect a stereo cable to the GA-FC jack.

- * Always use a stereo cable.
- * Use cables that do not contain resistors.

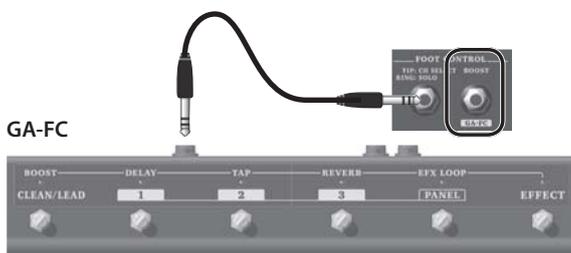

Using the GA-FC

You can switch between the CLEAN channel and LEAD channel, and switch the TONE SETTING selection. You can also turn on/off BOOST, DELAY, and REVERB, and an external effect (EFX LOOP).

When the [1], [2], [3], or [PANEL] switch is selected, you can long-press the same switch to turn SOLO on/off. When SOLO is on, the indicator blinks slowly.



Using the expression pedals

If you connect an expression pedal (sold separately: Roland EV-5, BOSS FV-500L, BOSS FV-500H), you can use the pedal to vary the volume.



Expression Pedal

Jack	Explanation
INPUT	Adjusts the guitar's signal level that is input to the preamp.
VOLUME	Adjusts the master volume.

Setting MINIMUM VOLUME of an expression pedal

With the [MINIMUM VOLUME] knob of an expression pedal, you can set the value for when the pedal is lifted up all the way (lowest value).



* Use only the specified expression pedal. By connecting any other expression pedals, you risk causing malfunction and/or damage to the unit.

Turning the Power On/Off

* Once everything is properly connected (p. 4–p. 10), be sure to follow the procedure below to turn on their power. If you turn on equipment in the wrong order, you risk causing malfunction or equipment failure.

1. Connect the power cord to an AC outlet.

* Use only the power cord that was included with the unit.

2. Make sure that the Nextone's [MASTER] knob and the volume of the devices connected to the Nextone are set to "0."

* Before connecting your instrument to the Nextone's INPUT jack, set the [MASTER] knob to the minimum setting (far left).

3. Turn on the Nextone.

* Before turning the unit on/off, always be sure to turn the volume down. Even with the volume turned down, you might hear some sound when switching the unit on/off. However, this is normal and does not indicate a malfunction.



4. Turn on the power of the devices connected to the LINE OUT jack and PHONES/REC OUT jack.

5. Adjust the volume levels for the devices.

Before switching off the power, lower the volume on each of the devices in your system and then TURN OFF the devices in the reverse order to which they were switched on.

* If you need to turn off the power completely, first turn off the unit, then unplug the power cord from the power outlet. Refer to "To completely turn off power to the unit, pull out the plug from the outlet" (p. 2).

About Tube Logic

Warm, bouncy, responsive, dynamic, elastic...these are all terms that guitarists use to describe the satisfying experience of playing their favorite tube amps. Thanks to Roland's Tube Logic, these words can be applied to the Nextone as well.

Dramatically evolved from the first-generation sound of the original Nextone amps from the '90s, today's Tube Logic accurately provides the complex, highly interactive behavior of classic tube designs in meticulous detail, providing the magical "it" factor that takes a guitar amp from a simple sound system to a living, breathing musical instrument. Great feel, distortion control with touch and volume, bloom, sparkle, power supply "sag," and more—everything that players love about a finely tuned vintage tube amp is present in abundance with the Nextone.

Main Specifications

	Nextone Stage	Nextone Artist	Nextone Special	
Rated Power Output	40 W	80 W	80 W	
Nominal Input Level	INPUT: -10 dBu (1 MΩ) RETURN IN: -10 dBu (100 kΩ)			
Speaker	30 cm (12 inches) x 1			
Controls	[CH SELECT] button [BOOST] button [TONE] button <CLEAN> [VOLUME] knob <LEAD> [GAIN] knob [VOLUME] knob <EQUALIZER> [BASS] knob [MIDDLE] knob [TREBLE] knob <EFFECT> [DELAY] button [TAP] button [DELAY] knob [REVERB] knob [PRESENCE] knob [MASTER] knob [POWER AMP SELECT] switch (6V6, 6L6, EL84, EL34) [POWER CONTROL] switch (STANDBY, 0.5 W, HALF, MAX) [POWER] switch	[CH SELECT] button <CLEAN> [EXTRA HEAD ROOM] button [TONE] button [SOLO] button [VOLUME] knob [BASS] knob [MIDDLE] knob [TREBLE] knob [BOOST] knob [DELAY] knob [REVERB] knob [BOTTOM] knob [TOP] knob [PRESENCE] knob [POWER AMP SELECT] switch (6V6, 6L6, EL84, EL34) [SOLO] knob <LEAD> [TONE] button [SOLO] button [VOLUME] knob [BASS] knob [MIDDLE] knob [TREBLE] knob [BOOST] knob	[DELAY] knob [REVERB] knob [BOTTOM] knob [TOP] knob [PRESENCE] knob [POWER AMP SELECT] switch (6V6, 6L6, EL84, EL34) [SOLO] knob <EQUALIZER> [AMERICAN] button [BRITISH] button <EFFECT> [BOOST] button [DELAY] button [TAP] button [REVERB] button <TONE SETTING> [1] button [2] button [3] button [PANEL] button [MASTER] knob [POWER CONTROL] switch (STANDBY, 0.5 W, HALF, MAX) [AIR FEEL] switch (REC, LIVE, BLEND) [POWER] switch	
Indicators	CLEAN, LEAD CUSTOM MODE BOOST TONE DELAY TAP	CH SELECT <CLEAN> CLEAN EXTRA HEAD ROOM TONE SOLO <LEAD> LEAD TONE SOLO <EQUALIZER>	AMERICAN BRITISH <EFFECT> BOOST DELAY TAP REVERB <TONE SETTING> 1 2 3 PANEL	
Connectors	INPUT jack: 1/4-inch phone type REC OUT/PHONES jack: Stereo 1/4-inch phone type SEND jack: 1/4-inch phone type RETURN jack: 1/4-inch phone type LINE OUT jack: 1/4-inch phone type SPEAKER OUT 16Ω A jack: 1/4-inch phone type	SPEAKER OUT 16Ω B jack: 1/4-inch phone type SPEAKER OUT 8Ω jack: 1/4-inch phone type CH SELECT/BOOST jack: 1/4-inch TRS phone type DELAY/GA-FC jack: 1/4-inch TRS phone type USB  port: USB B type AC IN jack	INPUT jack: 1/4-inch phone type REC OUT/PHONES jack: Stereo 1/4-inch phone type SEND jack: 1/4-inch phone type RETURN jack: 1/4-inch phone type LINE OUT jack: 1/4-inch phone type LINE OUT jack: XLR type SPEAKER OUT 16 ohms A jack: 1/4-inch phone type	SPEAKER OUT 16 ohms B jack: 1/4-inch phone type SPEAKER OUT 8 ohms jack: 1/4-inch phone type CH SELECT/SOLO jack: 1/4-inch TRS phone type BOOST/GA-FC jack: 1/4-inch TRS phone type USB port: USB B type MIDI IN connectors AC IN jack
Power Consumption	37 W	77 W	88 W	
Dimensions	492 (W) x 248 (D) x 427 (H) mm 19-3/8 (W) x 9-13/16 (D) x 16-13/16 (H) inches	572 (W) x 248 (D) x 475 (H) mm 22-9/16 (W) x 9-13/16 (D) x 18-3/4 (H) inches	620 (W) x 246 (D) x 530 (H) mm 24-7/16 (W) x 9-11/16 (D) x 20-7/8 (H) inches	
Weight	13.4 kg (29 lbs 9 oz)	16.2 kg (35 lbs 12 oz)	18.0 kg (39 lbs 11 oz)	
Accessories	Owner's manual, Power cord, GA-FC sticker			
Options (sold separately)	Footswitch: BOSS FS-5L, BOSS FS-6, BOSS FS-7 Expression pedal: Roland EV-5, BOSS FV-500L, BOSS FV-500H		GA FOOT CONTROLLER (GA-FC)	

* 0 dBu = 0.775 Vrms

* This document explains the specifications of the product at the time that the document was issued. For the latest information, refer to the Roland website.

Block Diagram

